

Exporting Assets and Locations

Learn the steps to export asset data and room locations from BIM 360 Ops. This document will cover the following topics:


[EXPORT ASSET DATA](#) (PAGE 2)

[EXPORT ROOM LOCATIONS](#) (PAGE 3)


If you need additional assistance, reach out to our Customer Care Team directly at bim360ops-customer@autodesk.com

To Export Asset Data

Go to the Assets Panel on the Dashboard

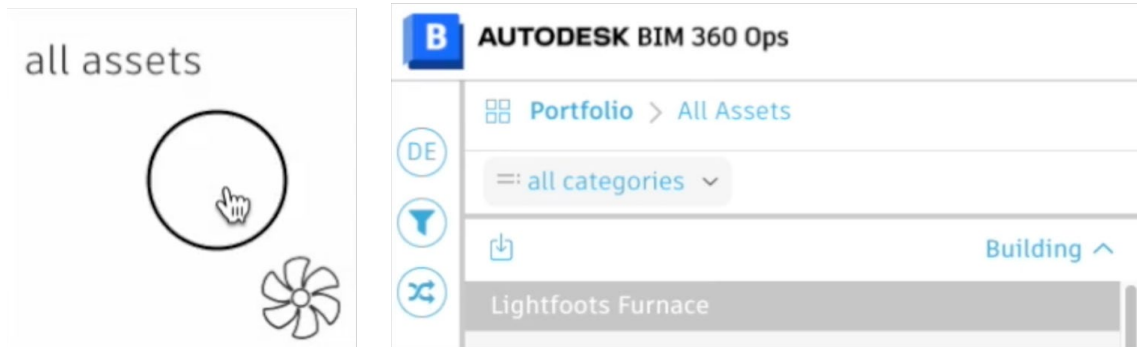



Click Export to CSV.

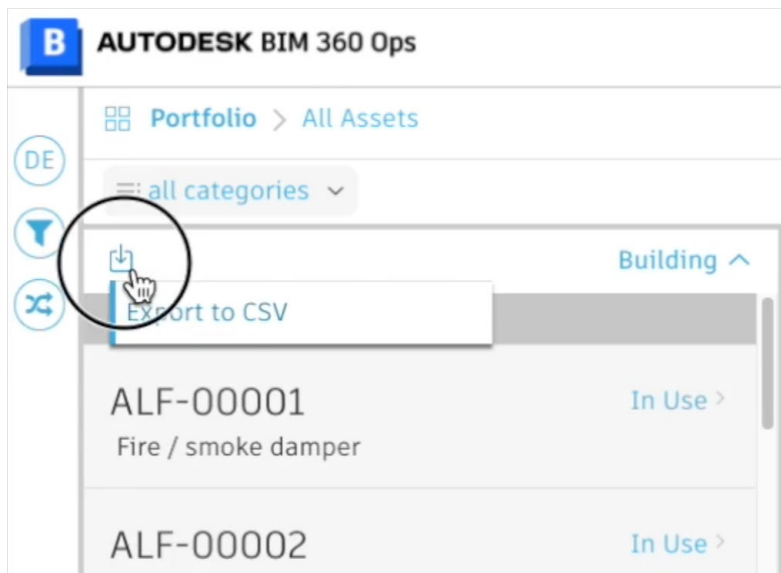



This will produce a spreadsheet of the Asset data.

To Export Room Locations

Go to the Locations Dashboard on the selected facility

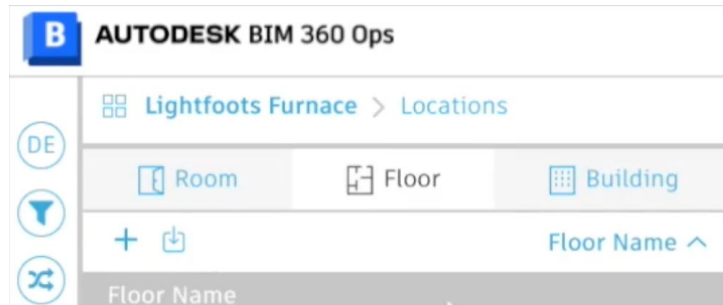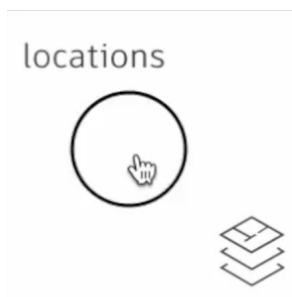

Click Room and then Export to CSV.

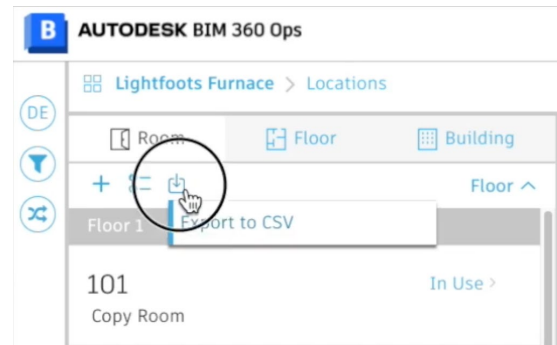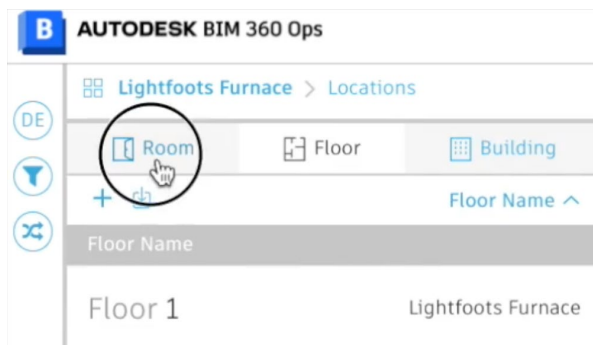

This will produce a spreadsheet of the room locations.